



Mac Pro Rack Rail Upgrade Assembly Instructions


Before installing Mac Pro into a rack, check Apple Mac Pro [installation instructions](#) and [safety information for your Mac](#).

Tools Needed:


2mm Hex Key

5/16" Socket

Phillips Screw Driver

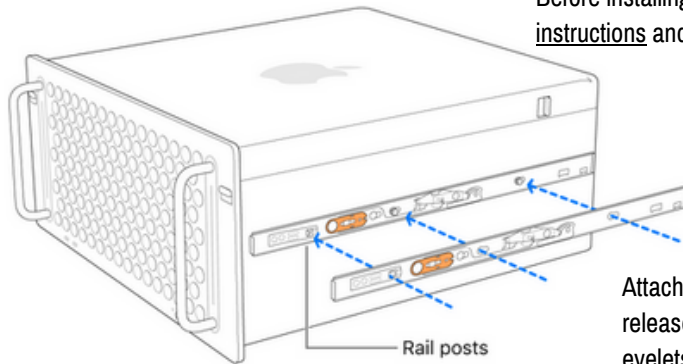

Attach the inner rails to the sides of Mac Pro, making sure that the release latches are towards the front of the computer and the rail eyelets are well placed onto the Mac Pro rail posts.

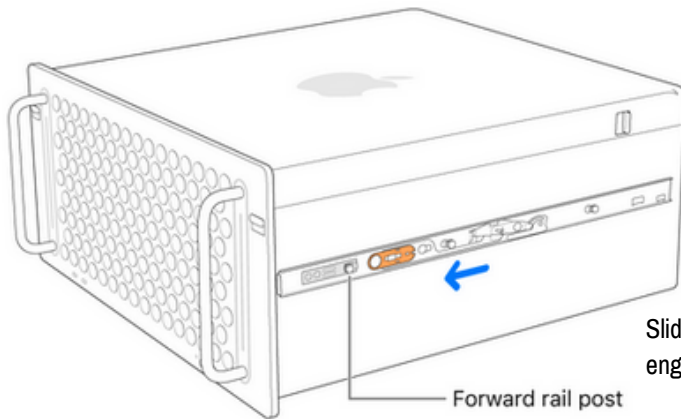

Slide the rail section forward until the spring lock engages the forward post.




Slide the Delrin guides onto the Apple inner rails. The Delrin guide should have the set screw end oriented towards the back side of the computer.




Secure Delrin guides to inner rail with a set screw. To remove Delrin, simply back up set screw and slide Delrin off inner rail.

Quick Mounting Tip

Since we are making use of the inner rails from the Apple provided rack mounting rails, users can make use of the Apple provided rack rails in a home office 24" minimum depth rack cabinet, while using our system for onset applications. Users simply need to remove the Mac Pro from their shallower rack case or DIT cart, slide Delrin guides off and slide the Mac Pro into the Apple provided rack rails.

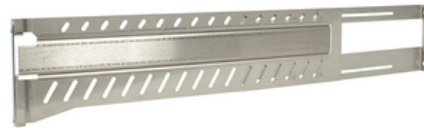


Adjust and set telescoping rack rail length to rail to rail depth of rack case or cabinet.
Use 5/16" Socket to adjust the 6-32 hex nuts.
Three mounting slots are available to set rack rail to rack depths between 16" to 24".

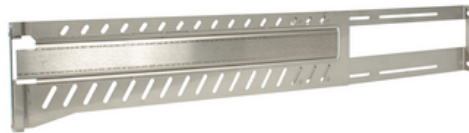

Quick Mounting Tip

The Rack Rail assembly ships pre assembled to 17.85"/453.39mm (the width of the Mac Pro with our Rack Rail Upgrade) to check the inner dimensions of your rack case or cabinet for interference along the rail to rail rack depth. Simply unpack your system and slide the pre assembled system along the depth of your rack case or cabinet.

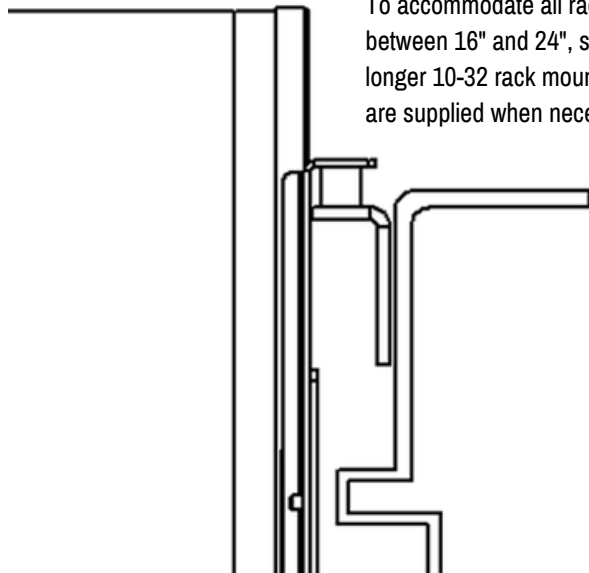

To accommodate all rack depths between 16" and 24", spacers and longer 10-32 rack mounting screws are supplied when necessary.

The Mac Pro Rack Rail Upgrade comes equipped to mount to threaded 10-32 racks or square hole racks. 10-32 screws and mounting hardware are provided as mounting with 10-32 thread mounting screws is **required**.

To adapt square hole racks to 10-32, cage nuts are provided.

