




# VESA Adapter Set - 300x200mm & 300x300mm Assembly Instructions

Use #11130, M6  
x16 Pan Head  
Phillips Screw - 4  
places

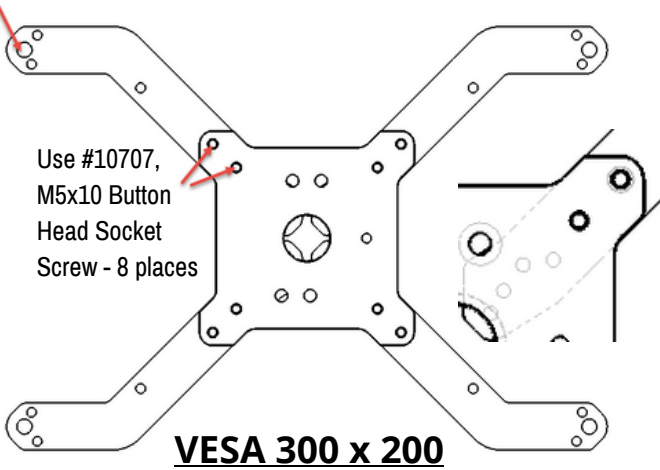


Side View




Monitor  
Side

## Quick Release VESA Plate Mounting

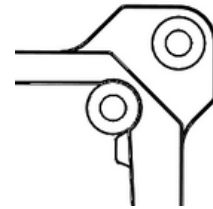

For QR VESA  
Monitor Plate,  
use #11069,  
M5x10 Flat Head  
Socket Head  
Screw - 8 places

Use #11130, M6  
x16 Pan Head  
Phillips Screw - 4  
places

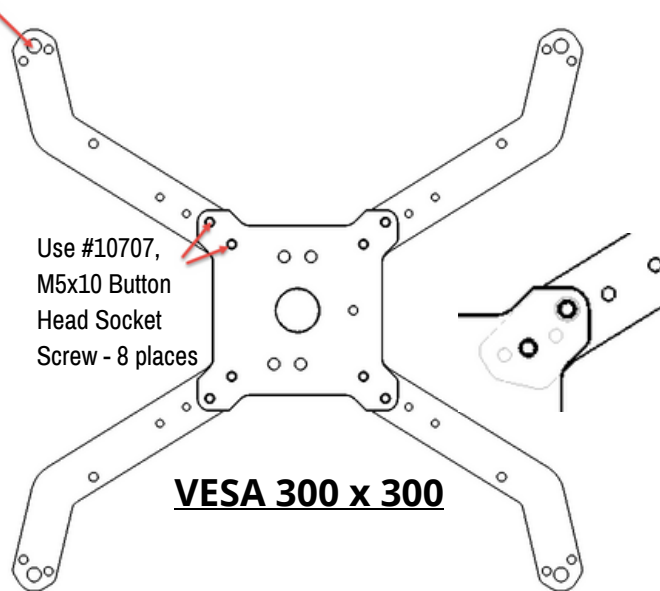

Side View



Monitor  
Side

**For Upgrade Innovations monitor  
mounts. Always check load rating  
of monitor mount. All mounting  
and installation shall conform to  
FD manufacturer and VESA Flat  
Display Mounting Interface (FDMI)  
Standard**


# VESA Adapter Set - 400x200mm & 400x300mm & 400x400mm

## Assembly Instructions

Side View

Use #11130, M6  
x16 Pan Head  
Phillips Screw - 4  
places

Use #13064,  
M5x12 Button  
Head Socket  
Screw - 8 places

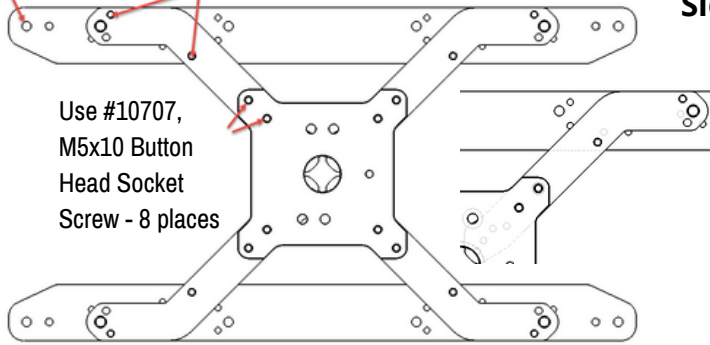

Use #10707,  
M5x10 Button  
Head Socket  
Screw - 8 places

**VESA 400 x 200**




Monitor  
Side

Side View

Use #11130, M6  
x16 Pan Head  
Phillips Screw - 4  
places

Use #13064,  
M5x12 Button  
Head Socket  
Screw - 8 places

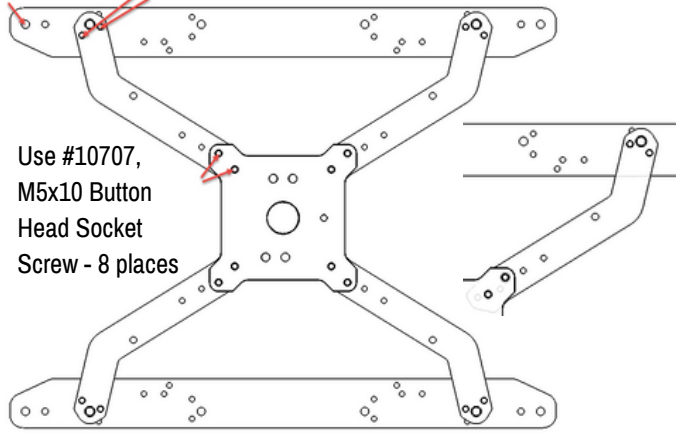

Use #10707,  
M5x10 Button  
Head Socket  
Screw - 8 places

**VESA 400 x 300**




Monitor  
Side

Monitor  
Side

Side View

Use #11130, M6  
x16 Pan Head  
Phillips Screw - 4  
places


Use #13064,  
M5x12 Button  
Head Socket  
Screw - 8 places

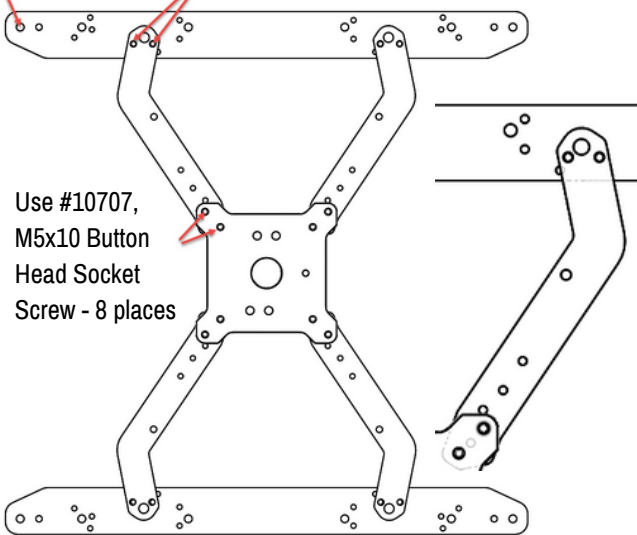

Use #10707,  
M5x10 Button  
Head Socket  
Screw - 8 places

**VESA 400 x 400**

### Quick Release VESA Plate Mounting

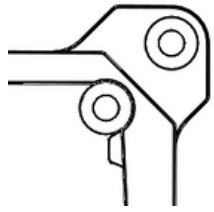

For QR VESA  
Monitor Plate,  
use #11069,  
M5x10 Flat Head  
Socket Head  
Screw - 8 places

**For Upgrade Innovations monitor mounts. Always check load rating of monitor mount. All mounting and installation shall conform to FD manufacturer and VESA Flat Display Mounting Interface (FDMI) Standard**